




A2 Headlight Harness 9004 bulbs

Always refer to a factory repair manual when working on your car.

- 1. Disconnect battery ground cable from the battery.**
- 2. Remove the upper fan shroud bracket bolt on the drivers side and slip the relay mounting bracket between the bracket and radiator and reinstall the bolt.**




- 3. Unplug the factory headlight socket from the driver side headlight.**
- 4. Plug the “Blue” male socket into the factory headlight socket you just removed from your headlight.**

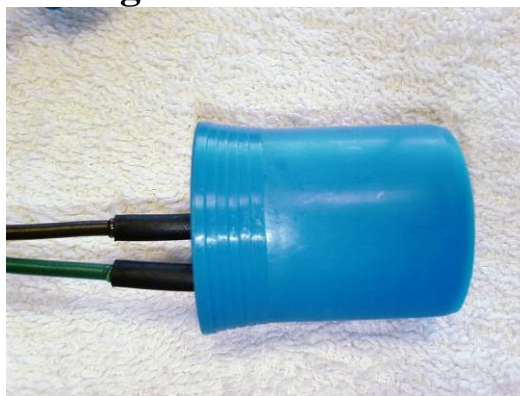

- 5. Plug the new headlight socket from the headlight harness onto the driver side headlight.**

6. **Route the harness to the passenger side headlight. (tie raps supplied to secure the harness)**
7. **Unplug the passenger side factory headlight socket. (tape the socket to the harness so it wont flop around.**
8. **Plug the new headlight socket from the headlight harness onto the passenger side headlight.**
9. **Route the power and ground wires around the battery and between the driver side inner fender.**
10. **Attach the red power wires to the positive battery terminal.**
11. **Attach the brown ground wires to the negative battery terminal.**

**You are all done with the install.
An extra relay and circuit breaker are also supplied.**

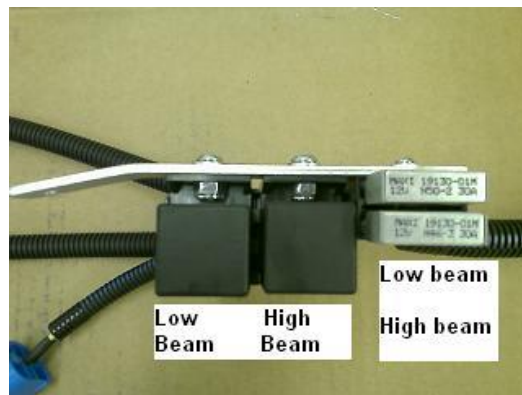

Relay and Circuit breaker locations.

Thank you,

Gary

If you have a question or need help you can contact me @

help@innovativewiring.com