



A3 Headlight Harness Highline

Always refer to a factory repair manual when working on your car.


- 1. Disconnect battery ground cable from the battery.**
- 2. Mount the relay bracket on the stud on the driver side strut tower. Mount the brown ground wires to this stud with the bracket.**



mounting stud circled in red

- 3. Route the harness from the relays to the driver headlight**
- 4. Unplug the factory headlight socket from the driver side headlight.**
- 5. Plug the new headlight socket from the headlight harness onto the factory driver side headlight socket.**
- 6. Route the harness to the passenger side headlight. (tie raps supplied to secure the harness)**
- 7. Unplug the passenger side factory headlight socket.**

8. Remove the locking clip from the factory socket.

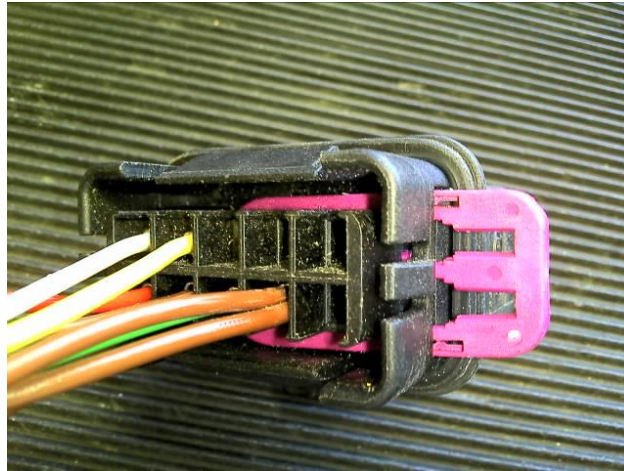

9. Remove the plugs from the four spaces in the socket without wires.

10. Insert the White, Yellow and two Brown wires into the empty spaces. Replace the blue locking clip.

11. Remove the headlight rear cover that has the headlight socket.

12. Remove the locking clip. See picture above.

13. Install the new high (White and Brown) and low beam (Yellow and Brown) wires into the socket matching the colors with the wires you just install into the harness socket. Do this for both headlights.

14. Attach the power wires from the headlight harness to the positive battery terminal.

Thank you,

Gary

If you have a question or need help you can contact me @

help@innovativewiring.com