

# 91-96 CAPRICE/IMPALA SS HEADLIGHT HARNESS INSTRUCTIONS

Please refer to repair manual when working on your car.

## Basic Instructions.


1. Disconnect and remove battery.
2. Remove passenger side front turn signal assembly. (Philips screw on top, then slide out)
3. Remove the bolt holding the headlight housing.



4. Remove the clip.
5. Loosen all the headlight housing bolts.
6. From inside the passenger fender route the harness under the headlight housing. (Route the plug for the passenger side headlight and the male plug to plug into the factory harness between the headlight housing and radiator support).



7. Tighten all the headlight housing bolts.
8. Mount the relay bracket using the bolt you removed.
9. Reinstall your turn signal assembly.
10. Plug the blue male plug into the factory passenger headlight plug.

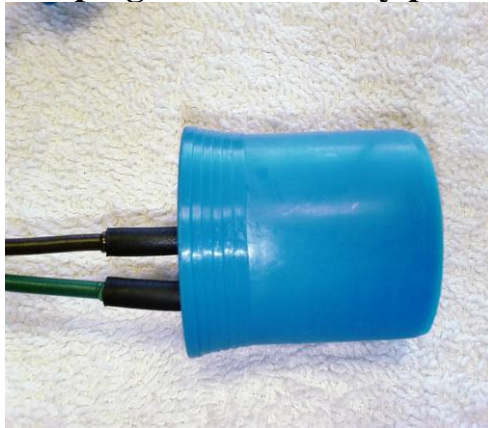

11. Plug the new headlight pug into the passenger side headlight.
  12. Route the harness up along the radiator shroud. (I supplied zip ties to tie it on the outside of the factory harness).
  13. Plug the new headlight plug into the driver's side headlight.
  14. Reinstall your battery.
  15. Connect the red wire from the harness to the positive post.
  16. Connect the brown wires to the negative post.
- (Note: on stock battery cables it maybe necessary to trim the terminal insulation).

Thank you,  
Gary

If you have any questions or need help please contact me at:  
[help@innovativewiring.com](mailto:help@innovativewiring.com)