

# 91-96 ROADMASTER HEADLIGHT HARNESS INSTRUCTIONS

Please refer to repair manual when working on your car.

1. Disconnect and remove battery.
2. Remove the front horn in the passenger side fender.
3. Remove passenger side front turn signal assembly. (Philips screw on top, then slide out)
4. Remove the bolt holding the headlight housing.



**Bolt to remove to remove the clip.**




5. Remove the clip.
6. From inside the passenger fender route the harness under the headlight housing. (Route the plug for the passenger side headlight and the male plug to plug into the factory harness between the headlight housing and radiator support).



**Harness routing. Headlight removed for picture you do not need to remove the headlight.**

- 7. Mount the relay bracket using the factory bolt you removed.**
- 8. Reinstall your turn signal assembly.**
- 9. Plug the blue male plug into the factory headlight plug.**

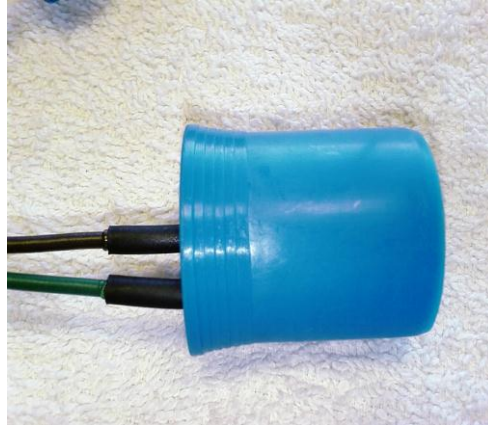

**Blue male plug on headlight harness to plug into passenger side headlight socket.**

- 10. Plug the new headlight pug into the passenger side headlight.**
- 11. Route the harness up along the radiator shroud. (I supplied zip ties to tie it on the outside of the factory harness).**
- 12. Unplug the factory driver side headlight socket from the headlight.**
- 13. Plug the new headlight socket into the driver's side headlight.**
- 14. The horn bracket must be bent slightly at the mounting area so it will clear the relays. Remount the horn.**
- 15. Reinstall your battery.**
- 16. Connect the red wire from the harness to the positive post on your battery.**
- 17. Connect the brown wires to the negative post on your battery.**

**(Note: on stock battery cables it maybe necessary to trim the terminal insulation).**

**Thank you,**

**Gary**

**If you have any questions or need help please contact me at:**

**[help@innovativewiring.com](mailto:help@innovativewiring.com)**